

10

CAMBER

Facility correctly compensates for expensive, uneven, premature tire wear. Adjust for Street/Race or Curb knocks!




CASTER

allows improved Hi-Speed directional stability. Better steering response, Quicker turn-in and Reduced dive/lift on Brake/Acceleration



TOE

only alters wear position. Increasing the overall wear rate.

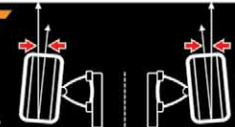

Rear Kits

K-MAC

Bolt-on 'Patented' Camber & Toe kits - Reduce wheel squat/Costly inner edge tire wear. Improve traction. Essential if lowering, load carrying or when expensive low profile tires fitted. Allows ongoing adjustment for Curb knocks (bush extraction tool provided).

* Have factory Camber - K-MAC kit doubles adjustment range

Mini /S Camber Adjustable Lower 'Turnbuckle' - Arms (Hi-Strength Chrom-Moly)	'01-'07	New	35026 i
* E39 '5' E60 '5', E63 '6', E64 '6'	'96-'07		193526 i
* E46 '3' E36 '3', 318(1S), 320, 325, 328 Incl. M3, Z4	'91-'07		192426 H
Also - Adjustable Lower 'Turnbuckle' - Arms (Hi-Strength Chrom-Moly)	'91-'07	New	92526 i
E36 '3' 316, 318(TI), Z3	'91-'03		192026 G
E30 '3' incl. M3, E28 '5' 520, 525 (82-4/86)	'82-'91		192026 G
E24 '6' (77-4/82), E23 '7' (77-9/82)	'77-'82		192026 G
E21 '3' E12 '5'	'75-'82		192026 G
E10 1502-2002, E3 2500, 2.8, 3.0/2/3	'66-'77		192026 G
E34 '5' incl. M5, E32 '7'	'87-'96		193326 H
E28 '5' 520, 525 (4/86-88), 528, 535 ('82-'88)	'86-'88		193326 H
E24 '6' (5/82-89), E23 '7' (9/82-86)	'82-'89		193326 H

CHRYSLER 'Front & Rear Kits'

K-MAC

300C	Camber & Caster	'05-'07	New	502216 K
	REAR Camber	'05-'07	New	502226 H
CrossFire	Camber & Caster	'04-'07	New	502016 J
	REAR Camber	'04-'07	New	502026 H
Caravan, Neon, PT Cruiser, Voyager	Camber	'99-'07		120216 E

FORD 'Front & Rear Kits'

K-MAC

Bolt-on 'Patented' Top of Strut System - Camber & Caster. Simply replaces upper mounts (as per BMW Kits). Also '05-'07 Mustang (earlier models replace lower/inner arm bushes - also for Camber/Caster, extraction tool supplied). Falcon kits replace upper/inner control arm mounts (Ratchet Adjust with self align bushes or Budget shim kits).

S Capri FWD (early see Escort)	'89-'94		481316 J 1/2/3
S Cortina Mk I	'62-'66		180216 J 2/3
S Escort Mk II 2 Litre / RS2000 (Small top-95mm bolt centers)	'75-'82		180816 J 1/2/3
S Mk II 1600, Mk I incl. T/Cam also Capri, Cortina Mk II	'66-'82		180716 J 1/2/3
S Escort USA (Also Front 120116 E, Rear 120116 E -Camber)	'95-'04		184416 K 2/3
Explorer REAR Camber & Toe	'96-'07		183516 H
Falcon * AU, BA, BF 'Ratchet Adjust.' & Self Align bush mounts	'99-'07		181316 H

(Above kit incl. bush extraction tool)

REAR Camber. BA, BF All (XR6/8 doubles adj. range)	'03-'07	New	181426 F
* AU, BA, BF- Budget Shim Adjust - half kit -2	'99-'07		181416 D
* Budget Shim Adjust - full kit -4 (incl. extraction tool)	'99-'07	New	181516 F
* EA-EL, XH, NL, DL 'Ratchet Adj.' & Self Align bush mounts	'88-'99		181116 H
* Budget Shim Adjust - half kit -2	'88-'99		181216 D
XD, XF Extra H/Duty (Non-Slip) Camber bolts	5/81-'86	New	181016 C
XR, XD Extra H/Duty (Non-Slip) Camber bolts	'67-5/81		180916 C

* Also Uprated bushes MAINTAIN 'TOE' SETTINGS (major cause premature tire wear)

* AU-BF (Lower arm 'front' bushes)	'99-'07		181318 F
* EA-EL (Lower arm 'inner' bushes)	'88-'99		181118 E
S Focus Quickest/Biggest Adj. incl's 'Captive' Pillow Ball centers	'05-'07	New	182616 J 1
S Quickest/Biggest Adj. incl's 'Captive' Pillow Ball centers	'99-'04		182516 J 1
REAR Camber up to 2.2°s (+/-) - 2 kits doubles range	'99-'07		182526 F
S Laser KF, KH, Telstar, TX5	'89-'94		481316 J 1/2/3
S KC, KG (2 bolt strut top)	'86-'89		480216 J 1/2/3
S Mustang TOP STRUT - Biggest / Easiest Adjust. (Camber only - page 5)	'05-'07	New	182716 J 2/3
CONTROL ARMS - Lower/Inner mount bushes	'98-'04		182416 i
providing precise Camber & Caster	'94-'97		182316 i
(Includes bush extraction tool)	'88-'93		182216 i
Territory 'Ratchet Adjust' with Self Align bush mounts	'04-'07		183616 K
S Transit Van Camber (top of strut)	8/00-'07		183116 H
Camber (wedges - specify .5 or 1 deg.)	'86-7/00		183016 F



NISSAN 300ZX (Z32) FRONT Upper Arms. #541416 J

UNIQUE DESIGN Maintenance free thrust bearings adjustable (under load)

FALCON EA-EL AU, BA, BF



#181116 H

#181316 H

NEW RATCHET / LOCK SYSTEM WITH SELF ALIGN BUSHES.

FOCUS FRONT CAMBER & CASTER KITS

Biggest Adjustment - No Height Increase Pillow Ball (Self aligning - Eliminates factory plastic encased non-captive bearings)



FRONT '99-'04 #182516 J

REAR - 'Camber' Kit #182526 F (All)

'05-'07 #182616 J1

MERCEDES FRONT CAMBER & CASTER KITS ALL MODELS 1968 - 2007



MERCEDES REAR CAMBER & TOE KITS ALL MODELS 1968 - 2007



ADJUSTABLE ANTI-SWAY BARS Ultimate 'Race' or 'Drift' SUBARU WRX REAR



STREET CONTROL OR RACE CONTROL

F1 style 'Slide System' (both arms & control arms) for Fast adjust - Maximum effectiveness.

www.k-mac.com
sales@k-mac.com
366 Princes Hwy, Rockdale
Sydney, NSW 2216 Australia
Ph: +61 2 9556 1799
Fax: +61 2 9556 1799

CAMBER

Facility correctly compensates for expensive, uneven, premature tire wear. Adjust for Street/Race or Curb knocks!




CASTER

allows improved Hi-Speed directional stability. Better steering response, Quicker turn-in and Reduced dive/lift on Brake/Acceleration



TOE

only alters wear position. Increasing the overall wear rate.

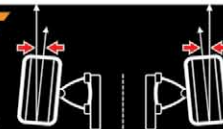

GM (Holden) 'Front & Rear Kits'



Astra	Camber	Bolt on Rear Anti-Sway	'98-'07	120116 E
S	Camber & Caster.	bar also avail. 202221	'91-'98	202116 J
S Calibra	Camber & Caster		'90-'97	202516 K 1
	REAR Camber & Toe		'90-'97	202526 H
Vectra	Camber		'95-'07	120216 E
	REAR Camber		'02-'07	203126 F
	REAR Camber		'95-'01	203026 F
VE	Camber & Caster Bushes (lower arms)		'06-'07	201816-1F
VE	FRONT Lower 'Turnbuckle' arms - Camber (Chrom-Moly)		'06-'07	201816 K
S VT-VE *	Only Strut kit Camber & Caster (includes Pillow Ball centers)		'97-'07	201716 J 2/3
S VR-VS *	Camber & Caster - also allows Caster Adj. to VT/VE specs		'93-'97	201616 K 2/3
S VB-VP *	All 3 stages (1/2/3) provide biggest adjustment range		'78-'93	201516 H 1/2/3
VP-VZ	REAR (IRS) Camber & Toe. Similar BMW- Strongest kit		'91-'06	201626 H
Also recommend replacing the '2' X-member mounts with Urethane to reduce Wheel tramp / Flex / Fatigue cracking increase Traction. Incl's. special 'bump stops (for either Street or Race application)				
			'91-'06	201727 F

OTHER POPULAR KITS ...

Including Front/Rear uprated Anti-Sway bars Also 'adjustable' F1 Style including ultimate 'Slide System' - both arms and control arms.

VE	FRONT BAR Tubular 32 ^{mm} (Chrom-Moly) 3 Stage Adj.	'06-'07	201811 K
VE	STRUT BRACE Race Design -- (ALLOY TWIN	'06-'07	201814 i
VT-VZ	TUBE - NO FLEX) Tauter / Quicker response	'97-'06	201714 i
VR-VS	times. Maintain Camber angles when cornering	'93-'97	201614 i
VB-VP	(Excluding HDT/HSV with Bonnet scoop).	'78-'93	201514 i
VB-VS	PANHARD ROD (solid axle) allows Accurate centering of rear wheels. (Race/ Chrom-Moly Turnbuckle Adj.) Essential if lowering	'78-'97	201524 G
VB-VS	ADJ. ARMS REAR-- UPPER (Race design Chrom-Moly)	'78-'97	201527 H
VN-VT	SWAY BAR FRONT 'OFFSET' PIVOTS & Bushes)	'88-'00	201515 D
VB-VL	SWAY BAR 'Strut' Mounting - updates to VN-VE	'78-'88	201415 F
VT-VZ	* CASTER 'RODS' FRONT - 'ADJ.' on car - Race design Turn	'97-'06	201716-1J
VB-VS	buckle. Also updates early to VT-VE Specs. (7.75°)	'78-'97	201516-1J
	* CASTER BUSHES Urethane	VT-VZ 'Front' '97-'06	201717 F
	to 'maintain' Toe settings	VB-VS 'Front' '78-'97	201617 E
	major cause of wear	VB-VZ 'Rear' '78-'06	201717 D

OPEL/VAUXHALL 'Front & Rear Kits'



FRONT: Bolt-on Camber & Caster. While rear Camber & Toe - Reduce wheel squat/ costly inner edge tire wear. Improve traction. Essential lowering, load carrying or when expensive low profile tires fitted. Allows ongoing adjustment for curb knocks.

Astra	Camber	Bolt on Rear Anti-Sway	'98-'07	120116 E
S Astra, Kadett	Camber & Caster.	bar also avail. #202221	'91-'98	202116 J
Combo, Corsa, Cruze, Optra, Tigra, Vectra (& rear), Zafira	Camber		'93-'07	120116 E
S Calibra (Unique K-MAC design - Camber/Caster for the 1st time)			'90-'97	202516 K 1
	* REAR Camber & Toe		'90-'97	202526 H
Carlton	Camber		'90-'95	120216 E
	* REAR Camber & Toe		'90-'95	202526 H
Cavalier	* REAR Camber & Toe		'93-'96	202526 H
S Monaro, HSV	* REAR Camber & Toe		'03-'06	201716 J
	* REAR Camber & Toe		'03-'06	201626 H
Omega	Camber		'92-'02	120216 E
	* REAR Camber & Toe		'92-'02	202526 H
Senator	Camber		'88-'94	120216 E
	* REAR Camber & Toe		'88-'94	202526 H
S			'77-'87	201516 H 1/2/3
Vectra 'A', 'B', 'C', Signum	Camber		'95-'07	120216 E
	REAR 'C' Camber		'02-'07	203126 F
	REAR 'A', 'B' Camber		'95-'01	203026 F
S Commodore, Record			'77-'86	201516 H 1/2/3
	* Urethane Rear 'X' Member Bushes (2) - Reduce wheel tramp / Flex / Fatigue cracking			202527 F

BMW

incl. M3 FRONT -- CAMBER & CASTER



BMW (MINI) incl. 'S' FRONT

(Stage 3 - RACE Pillow Ball) 3/02-'07 #195116 J 3

Includes OFFSET

Top Coil Seats For extra NEG.



HONDA FRONT

'PATENTED' CIVIC / R - '01-'05

CRV, INTEGRA / - '02-'07

#331216 J 1



HONDA/ACURA '90-'01 - ALL MODELS

#331116 G

FRONT -- 'PATENTED' SLOTTED BALL JOINT



HONDA/ACURA -- REAR

CIVIC / R, CRX '05-'07 #332026 G

CIVIC / R '01-'05, CRV, INTEGRA '02-'07 #331226 G



COMMODORE VT-VE

Pontiac Firebird ('04-'07) (Pillow Ball) #201716 J (PATENT PEND)

ONLY STRUT KIT

Adjustable Camber also Caster



COMMODORE (IRS) REAR VP-VZ

'04-'06 Pontiac Firebird



STRONGEST BIGGEST ADJUSTMENT

www.k-mac.com
sales@k-mac.com
366 Princes Hwy, Rockdale
Sydney, NSW 2216 Australia
Ph: +61 2 9556 1799
Fax: +61 2 9556 1799

CAMBER

Facility correctly compensates for expensive, uneven, premature tire wear. Adjust for Street/Race or Curb knocks!




CASTER

allows improved Hi-Speed directional stability. Better steering response, Quicker turn-in and Reduced dive/lift on Brake/Acceleration



TOE

only alters wear position. Increasing the overall wear rate.

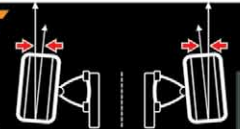

HONDA/ACURA 'Front & Rear Kits'

K-MAC

FRONT: Camber & Caster -Biggest adjustment, MINIMUM INVENTORY - one only # (331116) covers every model Honda/Acura '90 to 2000 -Unique 'Patented' Slotted Ball Joint Design. While #331216 'Patented' kit covers '01-'05 Civic, CRV, Element, Integra. & #332016 Patented kit Civic, Integra '06-'07. (#331116 incl's. 'Rear' Pos.(+) Camber spacers for IRS models).

Accord '90-'06, Civic/CRX '90-'00, CRV '96-'01, Del Sol '92-'97,		
Integra '90-'01, TSX '04-'06, Legend '92-'02, Prelude	'92-'02	331116 G
S Civic / R, CRX, (Camber & Caster) Incl's. Captive Pillow ball centers	'05-'07	New 332016 J1
S Civic / R ('01-'05), CRV, Element, Integra incl. RL/ TL/ RSX / TSX		
(Camber & Caster) - Incl's. Captive Pillow ball centers	'02-'07	New 331216 J1
Odyssey - Ball joint	'95-'07	331116 G
S Odyssey - Strut Models - Incl's. Captive Pillow ball centers	'98-'07	331216 J1
Civic / R '01-'07, CRV, Element, Integra / RSX '02-'07.		
Camber only - refer K-MAC (Kwik-Fit Universal Camber listing) Page 5		
Civic/CRX (early models with welded in ball joint)	'88-'89	331016 J

Rear Kits

K-MAC

Bolt-on. Reduce rear wheel squat / Costly inner edge tire wear. Increase traction. (Adjustable Arms are Competition rated - Steel not alloy).

Accord Incl. Euro Camber (Upper and Lower / Inner bushes)	'98-'07	New 3313 26 G
Civic/R CRX (Adjustable Upper/Outer Mounts)	'06-'07	New 332026 G
Civic/R '01-'05, CRV '02-'07, Element '03-'07, Integra / incl. RL / TL/ RSX / TSX		
Camber (Adjustable Upper Arms)	'02-'07	331226 G
Civic '88-'00, CRX '88-'92, Del Sol '92-'97, Integra / R		
Camber (Adjustable Upper Arms)	'90-'01	331126 G
Odyssey Camber (Adjustable Upper Arms)	'04-'07	331526 G
Legend Camber (Upper / Inner bushes)	'96-'02	331626 G
Prelude Camber & Toe (Upper / Inner mounts)	'92-'02	331016 J

MAZDA 'Front & Rear Kits'

K-MAC

'6' incl. MPS	'02-'07	New 482016 H
S '3' Quickest / Biggest Adj. incl's Captive Pillow Ball centers	'02-'07	New 182616 J 1
REAR Camber up to 2.2°s (+/-) - 2 kits doubles range	'02-'07	182526 F
S '2'	'02-'07	481716 K 2/3
S RX7 Mk 6	'93-'95	481316 K 2/3
S RX7 Mk4, Mk 5	'86-'92	481216 K 2/3
S RX7 Mk 1, 2, 3, RX5, RX4	'74-'85	481116 K 2/3
S RX3, 808, 323/GLC (RWD)	'72-'85	481016 K 2/3
S RX2, Capella 1600, 1300, R100	'70-'77	480816 K 2/3
S 323 Astina (3 bolt strut top)	'94-'98	480416 K 2/3
S 323 Astina (4 bolt strut top)	'89-'94	480316 K 2/3
S 323/GLC (2 bolt strut top)	'80-'89	480216 K 2/3



www.k-mac.com
sales@k-mac.com
366 Princes Hwy, Rockdale
Sydney, NSW 2216 Australia
Ph: +61 2 9556 1799
Fax: +61 2 9556 1799

CAMBER

Facility correctly compensates for expensive, uneven, premature tire wear. Adjust for Street/Race or Curb knocks!




CASTER

allows improved Hi-Speed directional stability. Better steering response, Quicker turn-in and Reduced dive/lift on Brake/Acceleration



TOE

only alters wear position. Increasing the overall wear rate.

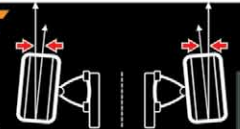

MERCEDES 'Front & Rear Kits'

K-MAC

FRONT: Bolt-on 'Patented' Camber & Caster kits. Camber for more even tire wear traction. Caster for Improved straight line & Hi-speed directional stability. All are unique Patented single wrench precise adjustment under load- no special tools (bush extraction tool provided).

203 (C), 204 (C) 209 (CLK), 211 (E), 215 (CL), 219 (CLS), 220 (S), 221 (S) 230 (SL) '00-'07	New	502216 K
210 (E) '95-'02		502116 J
170 (SLK), 171 (SLK) 202 (C), 208 (CLK) '83-'07		502016 J
124 (E), 126 (S Coupe), 129 (SL), 201 (190 E) '81-'99		501716 J
'A', 'B', 169 Series Camber '98-'07		120216 E
Vito Camber & Toe Factory Fitted - Kil doubles adj. range '98-'07		120216 E

Rear Kits * 'Toe' factory fitted - kit doubles adj. range

Bolt-on Patented Camber & Toe kits - Reduce wheel squat/costly inner edge tire wear. Improve traction. Essential Lowering, Load carrying or when expensive low profile tires are fitted. Allows ongoing adjustment for Curb knocks (bush extraction tool provided).

* 204 (C), 211 (E), 215 (CL), 219 (CLS), 220 (S), 221 (S), 230 (SL) '00-'07	New	502226 i
* 209 (CLK) 7/04-'07		501926 H
* 209 (CLK) 01-6/04, 171 (SLK) '05-'07		502026 H
* 124 (E), 129 (SL), 170 (SLK), 201 (190 E), 202 (C), 203 (C), 208 (CLK), 210 (E) '83-'07		502026 H
* 140 '91-'99		501926 H
107 (SL/SLC), 108 (S), 109 (SE/SEL), 114 (E), 115 (D), 116 (S), 123 (E), 126 (S) '68-'91		501826 H

MITSUBISHI 'Front & Rear Kits'

K-MAC

Bolt-on 'Patented' Top of Strut System - Camber & Caster. Simply replaces upper mounts as per BMW kits. While the K-MAC unique 'Patented' concept of a Front sliding / slotted Ball joint kit is also Bolt-on. Providing both Camber & Caster. The Rear kits provide Camber (precise / single wrench adjustment) and all include bush extraction tools.

S Centura KB, KC	'74-'78	520216 K	2/3
S Cordia	'82-'87	520116 K	2/3
Eclipse/Talon	'00-'04	521316 K	2/3
REAR Camber	'00-'04	522326 G	
(Ball joint)	'95-'00	522216 H	
REAR Camber	'95-'00	522226 G	
S	'89-'94	522116 K	2/3
REAR Camber	'89-'94	522126 F	
S Galant FWD (Strut - all)	'85-'06	521016 K	2/3
(Ball joint)	'94-'98	522216 H	
S GA, GB, GC, GD	'71-'76	520616 K	2/3
S Lancer Incl. GSR / EVO	'88-'07	New 520716 K	2/3
S (2 bolt strut top)	'83-'88	520916 J1	
S LB, LC, LQ, LR, LS, LT	'76-'83	520616 K	2/3
S LA (4 bolt strut top)	'74-'77	520516 J1/2/3	
Magna REAR Camber & Toe - IRS models (front refer Page 5)	'95-'05	521216 K	
S Sigma, Scorpion GJ, GK, GN (4 bolt strut top)	'82-'87	521416 J1/2/3	
S GE, GH (3 bolt strut top)	'77-'82	520616 J1/2/3	
S Starion	'82-'89	520416 J1/2/3	

BMW

incl. M3
FRONT --
CAMBER
& CASTER



• STREET / SEMI RACE
• STREET / RACE
• FULL RACE

BMW (MINI) incl. 'S' FRONT

(Stage 3 - RACE Pillow Ball) 3/02-'07
#195116 J3

Includes OFFSET
Top Coil Seats
For extra NEG.

**HONDA FRONT**

'PATENTED'

CIVIC / R - '01-'05
CRV, INTEGRA / - '02-'07

#331216 J1

**HONDA / ACURA '90-'01 - ALL MODELS**

#331116 G

FRONT -- 'PATENTED' SLOTTED BALL JOINT

**HONDA / ACURA -- REAR**

CIVIC / R, CRX '05-'07 #332026 G

CIVIC / R '01-'05, CRV, INTEGRA '02-'07 #331226 G

**COMMODORE VT-VE**

Pontiac Firebird ('04-'07)

(Pillow Ball) #201716 J

(PATENT PEND)

201616 K2

incl's New

Adjustable

Camber also

Caster

ONLY STRUT KIT

top coil seats

COMMODORE (IRS) REAR VP-VZ

'04-'06 Pontiac Firebird

201616 K2

incl's New

Adjustable

Camber also

Caster

ONLY STRUT KIT

top coil seats

STRONGEST BIGGEST ADJUSTMENT

www.k-mac.com

sales@k-mac.com

366 Princes Hwy, Rockdale

Sydney, NSW 2216 Australia

Ph: +61 2 9556 1799

Fax: +61 2 9556 1799

CAMBER

Facility correctly compensates for expensive, uneven, premature tire wear. Adjust for Street/Race or Curb knocks!




CASTER

allows improved Hi-Speed directional stability. Better steering response, Quicker turn-in and Reduced dive/lift on Brake/Acceleration



TOE

only alters wear position. Increasing the overall wear rate.

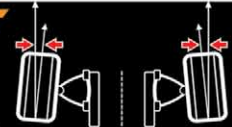

NISSAN 'Front & Rear Kits'

K-MAC

FRONT: 350Z replaces top arms. As with all K-MAC kits provides Biggest adjustment of both Camber & Caster. 300ZX ('89-'96) also replaces top arms for Camber. 280ZX-300ZX ('78-'89) replaces top strut mounts for Camber & Caster. While K-MAC 240Z, 260Z, 280Z only Top Strut design (Patented) to provide adequate Camber and Caster.

350Z (Z33), Infiniti G 35 Coupe	'02-'07	New	542516 L
300ZX (Z32) [Camber Strongest design - Race/ Rally proven]	'89-'96		541416 J
Caster [with Max. bush life - H/D Ball race 'thrust' bearings]	'89-'96		541516 F
S 300ZX (Z31)	'84-'89		541316 J 2/3
S 280ZX	7/78-'83		541116 J 2/3
S 240Z, 260Z, 280Z (New Top strut mount kit - See above)	'70-6/78	New	541016 K 2/3
S 180SX, 200SX, Gazelle, Silvia (S12, S13, S14, S15)	'83-'03		542716 J1/2/3
S N14, N15 Pulsar, Sentra	'93-'03		542316 J 2/3
R33, R34 Skyline [Camber & Caster -- Specify 'Radius rod' front]	'93-'03		542116 J
R32 Skyline [(Caster) bush length: 70, 73.8 or 82.5mm long]	'89-'93		541916 J
S R31, Skyline, Pintara	'86-'91		541816 J1/2/3
S 510, 610, 1600, 180B, 200B, 240K, C210, R30 Skyline	'68-'85		540516 J1/2/3
S Bluebird	'81-'86		540716 K 2/3
S Sunny, 1200, 120Y, B210	'78-'82		540816 J1/2/3
S Stanza	'78-'83		540616 J1/2/3

NISSAN 'Rear Kits'

K-MAC

Bolt-on Patented Camber & Toe kits - Reduced wheel squat/costly inner edge tire wear. Improve traction. Essential Lowering, Load carrying or when expensive low profile tires are fitted. Allows ongoing adjustment for Curb knocks (bush extraction tool provided).

350Z (Z33), Infiniti, G35 Coupe, M45, Maxima ('03-'07)	'02-'07	New	542526 H
300ZX (Z32)	'89-'96	New	542026 H
300ZX (Z31)	'84-'89		541326 H
280ZX	7/78-'83		541126 H
200SX, Silvia (S15)	'84-'03		541926 H
200SX, Gazelle, Silvia (S12)	'83-'89		541626 H
180SX, Silvia (S13, S14)	'86-'03		541826 H
R34, R33 Skyline	'94-'03		541926 H
R32	'89-'93		541926 H
R31 (IRS Independent. Suspension)	'86-'91		541716 H
510, 610, 1600, 180B, Skyline (R30, C210)	'68-'88		540526 H

ROVER/TRIUMPH 'Front Kits'

K-MAC

All Bolt-on Patented Camber & Caster "Top of Strut kits"

S TR7, TR8	incl's 'Captive' Pillow ball centers	'75-'82	New	780716 K1/2/3
S Triumph 2000, 2500, Stag, incl's 'Captive' Pillow ball centers		'63-'78	New	780616 J1
S Rover 3500 SDI		'77-'87		680616 J1/2/3



NISSAN 300ZX (Z32) FRONT Upper Arms. #541416 J

UNIQUE DESIGN Maintenance free thrust bearings adjustable (under load)



FALCON EA-EL

AU, BA, BF

#181116 H

#181316 H

NEW RATCHET / LOCK SYSTEM WITH SELF ALIGN BUSHES.

FOCUS FRONT CAMBER & CASTER KITS Biggest Adjustment - No Height Increase Pillow Ball (Self aligning - Eliminates factory plastic encased non-captive bearings)



MERCEDES FRONT CAMBER & CASTER KITS ALL MODELS 1968 - 2007



MERCEDES REAR CAMBER & TOE KITS ALL MODELS 1968 - 2007

ADJUSTABLE ANTI-SWAY BARS Ultimate 'Race' or 'Drift' SUBARU WRX REAR



STREET CONTROL OR RACE CONTROL F1 style 'Slide System' (both arms & control arms) for Fast adjust - Maximum effectiveness.

www.k-mac.com
sales@k-mac.com
366 Princes Hwy, Rockdale
Sydney, NSW 2216 Australia
Ph: +61 2 9556 1799
Fax: +61 2 9556 1799

CAMBER

Facility correctly compensates for expensive, uneven, premature tire wear. Adjust for Street/Race or Curb knocks!




CASTER

allows improved Hi-Speed directional stability. Better steering response, Quicker turn-in and Reduced dive/lift on Brake/Acceleration



TOE

only alters wear position. Increasing the overall wear rate.

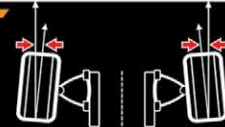

SUBARU 'Front & Rear Kits'

also refer page 5

NOTE: These K-MAC (and all 2/3 stage Strut kits) feature "replacement" center mounts. (As per BMW Front Kits), They provide the biggest adjustment range and are the strongest (yet lightweight alloy - 1 kilo / 2.2 lbs) - for serious / extreme Race / Rally conditions.

S Impreza, WRX, Forester, Heritage, Legacy, Outback, STI	'89-'07	New 721116 K	2/3
S Liberty ('89-'04)	721116 K	2/3	
S Impreza, WRX, Liberty, Forester, Legacy, Outback	REAR Camber	'89-'07	721126 K 3
Heritage, Liberty, Outback	REAR Camber (Lower / inner front bushes)	'00-'07	721226 F
S SVX, Vortex		'92-'97	720916 K 2/3
S 'L Series', MV, MY, Brumby (Refer Datsun 240 / 280Z design)		'79-'93	720416 K 2/3

TOYOTA 'Front Kits'



Bolt-on 'Patented' Top of Strut Adjuster System (all directional). Allows precise Camber and Caster. Supersedes 'Slot' adjusters - BIGGEST/QUICKEST/STRONGEST ADJUSTMENT. Change from Street to Race settings in 30 seconds - Time taken to loosen the 3 top Strut nuts!

RAV-4 Camber (Front / Rear- Essential If Altering Height)	'94-'07	120216 E	
REAR Camber - Front outer arm Bushes	'06-'07	767126 F	
REAR Camber - Adj. Lower 'Turnbuckle' Arms (Chrom-Moly)	'94-'05	New 767126 F	
S Celica ZZZ 230/231, W130	'99-'05	762416 K	2/3
S AT180/200, MA70, M220/221, Soarer, Supra, ST182/184/185/202/204	'88-'99	762116 K	2/3
S AT160, ST162	'85-'89	762016 K	2/3
S RA/TA23, 28, 35, 40, 55, RA60, RA65, SA63, MA61	'15-'85	761316 K	2/3
S RA/TA20, 21, 22, 25, 27	'75-'85	761316 K	2/3
S Corolla AE86 (RWD)	'83-'87	766016 K	2/3
S KE70, AE70, AE71	'81-'86	765016 K	2/3
S KE30-55	'75-'81	764516 K	2/3
S KE18-26	'70-'75	764116 K	2/3
Corona RT, ST, XT (130-142)	'79-'87	760916 K	2/3
S Cressida MX32, 36, 62, 73, 83 Corona RT, ST, XT (130-142)	'94-'99	760616 K	2/3
S Echo, Yaris	'99-'07	766216 K	2/3

VOLKSWAGEN 'Front Kits'



Bolt-on 'Top of Strut' kits (while Passat '97-'04 replaces upper/inner control arm bushes).

S Golf MkV, GTI, EOS, R32 Jetta, Passat ('05-'07)	Pillow ball centers	'04-'07	New 141616 J	1
S Beetle, Bora, Golf MkIV, GTI, R32, Jetta - Pillow ball centers		'98-'07	New 141016 J	1
Passat ('05-'07 See above)	'97-'05, Audi A4, A6, Skoda Octavia	'95-'07	140916 H	
S Golf Mk I (830616 H), Mk II / III (180716 H), Superbug (Strut) Beetle		'70-'74	830516 H	1



BMW

incl. M3

FRONT --

CAMBER

& CASTER

• STREET / SEMI RACE

• STREET / RACE

• FULL RACE

BMW (MINI) incl. 'S' FRONT

(Stage 3 - RACE Pillow

Ball) 3/02-'07

#195116 J 3

Includes OFFSET

Top Coil

Seats

For extra NEG.

HONDA FRONT

'PATENTED'

CIVIC / R - '01-'05

CRV, INTEGRA /

- '02-'07

#331216 J 1

New

HONDA / ACURA '90-'01 - ALL MODELS

#331116 G

FRONT -- 'PATENTED'

SLOTTED BALL JOINT

New

HONDA / ACURA -- REAR

CIVIC / R, CRX '05-'07 #332026 G

CIVIC / R '01-'05, CRV, INTEGRA '02-'07 #331226 G

New

COMMODORE VT-VE

Pontiac Firebird ('04-'07)

(Pillow Ball)

#201716 J

(PATENT

PEND)

201616 K 2

inel's New

Captive

and

extended

top coil seats

ONLY STRUT KIT

Adjustable

Camber also

Caster

COMMODORE (IRS) REAR VP-VZ

'04-'06 Pontiac Firebird

STRONGEST BIGGEST ADJUSTMENT

www.k-mac.com

sales@k-mac.com

366 Princes Hwy, Rockdale

Sydney, NSW 2216 Australia

Ph: +61 2 9556 1799

Fax: +61 2 9556 1799